


Bulk Capacity - 16 oz. (473 cubic cm.)
Cartridge Capacity - 14 1/2 oz. (429 cubic cm.)

NOTE

Illustration shows follower seal lip positioned for cartridge use.

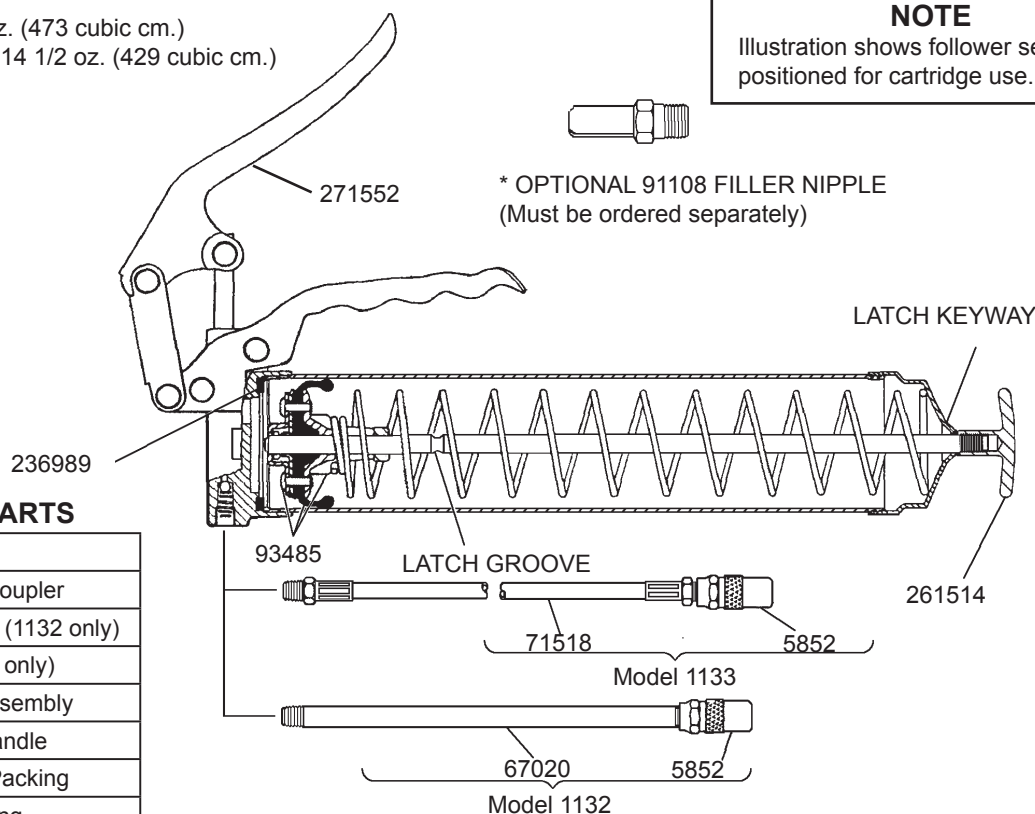

SERVICE PARTS

Part	Description
5852	Hydraulic Coupler
67020	Pipe Nipple (1132 only)
71518	Hose (1133 only)
93485	Follower Assembly
261514	Follower Handle
236989	Container Packing
271552	Return Spring

⚠ WARNING

Extreme pressure may cause nozzle extension or whip hose to burst. Use only LINCOLN APPROVED hoses and follow whip hose instructions and warnings.

⚠ WARNING

Grease gun can develop high pressure up to 6,000 P.S.I. (413 BAR)©. Use safety glasses and gloves for protection during operation. Keep hands clear of the extension during operation of the grease gun.


OPERATING INSTRUCTIONS©

- 1) Place a grease cartridge into the container tube. See "How to install a grease cartridge" below.
- 2) Wipe all the fittings clean before lubricating.
- 3) Push the coupler onto the grease fitting at a slight angle and then center the coupler onto the grease fitting.
- 4) Squeeze the pistol grip pump handle to dispense the grease taking care not to damage seals by excessive pressure or lubricant volume
- 5) When finished lubricating, turn the coupler at a slight angle to release the coupler jaws grip

HOW TO INSTALL A GREASE CARTRIDGE

- 1) Unthread the container tube from pump head 1 full turn.
- 2) Pull back the T-handle until the follower rod is fully extended, approximately 8 inches; pull it sideways to latch the rod groove into the keyhole slot in the container cap.



- 3) Remove the pump head from container tube.
- 4) Remove the plastic cap from the end of the grease cartridge and insert the open end into the container tube.
- 5) Remove the pull tab from the grease cartridge.
- 6) Loosely assemble the pump head to the container tube.
- 7) Disengage the follower rod from the container cap.
- 8) Engage the follower rod with the follower by rotating the T-handle and tap lightly to ensure the follower has entered cartridge chamber.
- 9) Squeeze pump handle while tightening the container tube into the pump head.
- 10) Disengage the follower rod from the follower by rotating the T-handle and push the follower rod into the container.

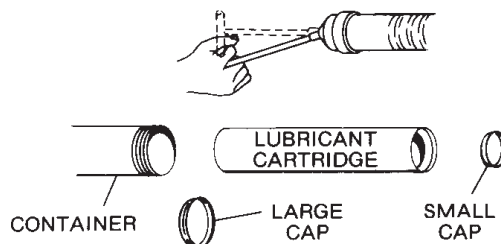

© Indicates Change



HOW TO CONVERT THE GREASE GUN TO ALLOW FILLING FROM A BULK CONTAINER OR FILLER PUMP©

- 1) Remove the pump head from container tube.
- 2) Unscrew the container's bottom cap from the container tube. Pull on the follower handle to extract the follower and spring from the container tube.
- 3) Grasp the follower between the thumb and the forefinger and flip the follower lip from the rear to the front side.
NOTE: The follower resembles a cup. When the grease gun is assembled for use with bulk lubricant, the cup opens toward the head assembly.
- 4) Reassemble the follower into container tube and position with the follower handle so that the container cap can be tightened onto the container tube.

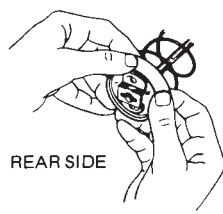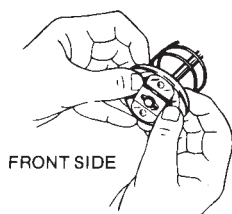


HOW TO FILL THE GREASE GUN FROM A BULK LUBRICANT CONTAINER©

- 1) Remove the pump head from container tube.
- 2) Pack grease into the cavity of the pump head.
- 3) Insert the open end of the container tube into grease.
- 4) Slowly pull the follower handle back while pushing the container tube deeper into the lubricant to prevent air pockets from forming in the container tube.
- 5) When the follower rod is fully extended pull it sideways to latch the rod groove into the keyhole slot in the container cap.
- 6) Loosely assemble the pump head to the filled container tube.
- 7) Release the follower rod from the container cap and disengage the follower rod from the follower by rotating the follower handle.
- 8) Slowly squeeze pump handle while tightening the container tube into the pump head.

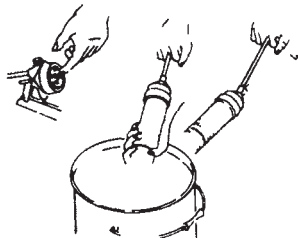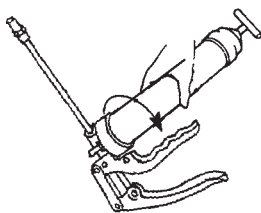

HOW TO FILL A GREASE GUN WITH A FILLER PUMP©

- 1) Engage the follower rod with the follower by rotating the follower handle.
- 2) Insert the grease gun filler nipple (Not included) into the filler pump socket and extend the grease gun handle away from the container tube.
- 3) Operate the filler pump to fill the grease gun container. When the follower rod is fully extended to approximately 8 inches the container is filled.
- 4) Disengage the follower rod from the follower by rotating the follower handle then push the follower rod into the container.

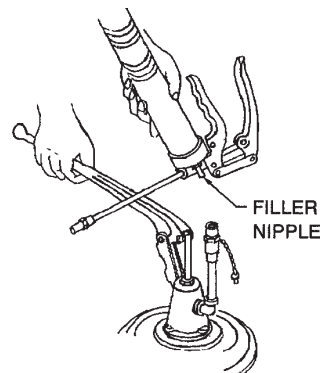

HOW TO EXPEL AIR POCKETS©

- 1) Unscrew the container tube approximately 1-1/2 turns from the pump head assembly.
- 2) Withdraw the follower rod from the container cap and engage it with the follower by rotating the follower handle.
- 3) While exerting light force on the follower handle, squeeze the pump handle until grease appears from the coupler or between the container tube and pump head.
- 4) Retighten the container tube into the pump head.
- 5) Disengage the follower rod from the follower by rotating the follower handle.
- 6) Push the follower rod into the container.

WARNING

Air pockets in the cartridge lubricant will cause the grease gun to lose its prime.