

# P 212



## Declaration of Incorporation

(Following Machinery Directive 2006/42/EC, Appendix II, Part 1 B)

The Manufacturer

SKF Lubrication Systems Germany GmbH, Heinrich-Hertz-Str. 2-8, D - 69190 Walldorf

Hereby declares that the partly completed machinery

Designation: Multi-line pump for supplying lubricants within a centralized lubrication system

Type: P 212

Part number 660-XXXXX-X

Year of construction See type identification plate

Complies with the basic safety and health requirements stated in the following and laid down in the Machinery Directive 2006/42/EC when first being launched in the market.

**1.1.2 ○ 1.1.3 ○ 1.3.2 ○ 1.3.4 ○ 1.5.1 ○ 1.5.6 ○ 1.5.8 ○ 1.5.9 ○ 1.6.1 ○ 1.7.1 ○ 1.7.3 ○ 1.7.4**

The special technical documents following Machinery Directive 2006/42/EC Appendix VII Part B were prepared. We undertake to send this in electronic form to the respective national authorities upon justifiable request. Authorized representative of the technical documentation is the head of standardization. For address, see Manufacturer.

Furthermore the following harmonized and other standards were applied in the respective areas:

Directive:

2004/104/EC

EMC Directive

2011/65/EU

RoHS Directive

Harmonized and other standards:

<u>Standard</u>	<u>Edition</u>	<u>Standard</u>	<u>Edition</u>	<u>Standard</u>	<u>Edition</u>
DIN EN ISO 12100	2011-3	DIN EN 60947-5-1	2010-04	DIN EN 61000-6-2	2006-03
DIN EN 809-1	2011	DIN EN 61131-2	2008-04	DIN EN 61000-6-3	2011-09
DIN EN 60204	2007	DIN EN 60034-1	2011-02	DIN EN 61000-6-4	2011-09
DIN EN 50581	2013-02	DIN EN 61000-6-1	2007-10	DIN EN 60947-5-1	2010-04
DIN EN 60204-1	2007-06				

The partly completed machine must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the EC Machinery Directive 2006/42/EC (and all other directives to be applied.)



Walldorf  
2013-02-01  
(JJJJ-MM-DD)

Dr.-Ing. Zdravko Paluncic  
Director Research & Development  
SKF Lubrication Business Unit

## Declaration of Incorporation

### Contents

<b>1. Guidelines .....</b>	<b>6</b>
1.1 Warnings .....	6
1.2 Illustrations .....	6
1.3 Copyright .....	6
1.4 Abbreviations .....	7
1.5 Manufacturer and Service addresses .....	7
1.6 Warranty .....	7
1.7 Disclaimer .....	7
 <b>2. Safety information .....</b>	 <b>8</b>
2.1 Emergency stopping of pump .....	8
2.2 Intended use .....	8
2.3 Pump operation .....	8
2.4 Foreseeable misuse .....	8
2.5 Prohibition of certain activities .....	8
2.6 Conversions/ modifications .....	9
2.7 Inspections .....	9
2.8 Warning label on the pump .....	9
2.9 Other applicable documents .....	9
2.10 Sources of hazard .....	9
2.11 Moving, rotating parts .....	9
2.12 Energies .....	10
2.13 Lubricants .....	10
2.14 Existing residual risks .....	10
2.15 Persons authorized to operate the pump .....	12
2.16 Protection of special groups of persons .....	12
2.17 Safety recommendations to be complied with .....	12
2.18 General behaviour when handling the machine .....	12
2.19 Transport, installation, maintenance, repairs, servicing .....	13
2.20 Initial commissioning, daily start-up .....	14
2.21 Cleaning .....	15
2.22 Operator's obligations .....	15
2.23 Determination of hazards .....	15
2.24 Provision of necessary information .....	15

# Installation Instructions

## P 212 Pump

---

2.25.	Inspection for correct use .....	15
2.26.	Briefing of external technicians .....	16
2.27.	Provision of personal protective equipment.....	16
2.28.	Training courses.....	16
2.29.	Inspection of the delivery.....	16
2.30.	Returns.....	16
2.31.	Disposal .....	16
<b>3.</b>	<b>Lubricant .....</b>	<b>17</b>
3.1.	Selection of lubricants .....	17
3.2.	Specification .....	17
3.3.	Ageing of lubricants .....	18
<b>4.</b>	<b>Technical data .....</b>	<b>19</b>
4.1.	Operating temperature .....	19
4.2.	Operating pressure.....	19
4.3.	Installation position.....	19
4.4.	Space requirement .....	19
4.5.	Sound pressure level.....	19
4.6.	Weight .....	19
4.7.	Electrical connection.....	19
4.8.	IP-protection class.....	20
4.9.	Tightening torques.....	20
4.10.	Connections, outlets.....	20
4.11.	Filling possibilities.....	20
4.12.	Rotational direction of the pump.....	20
4.13.	Permitted speeds .....	20
4.14.	Flow rate .....	21
4.15.	Motor.....	22
4.16.	Storage until first use.....	22
<b>5.</b>	<b>Technical data of the ultrasonic sensor .....</b>	<b>23</b>
5.1.	High-level signal / low-level signal / minimum switching distance .....	23
<b>6.</b>	<b>Brief description of the pump .....</b>	<b>25</b>

# Installation Instructions

## P 212 Pump

---

<b>7. Installation and commissioning .....</b>	<b>27</b>
7.1. Important note on the installation of the pump elements .....	27
7.2. Assembly of the pump elements.....	28
7.3. Adjustment of the pump elements .....	29
7.4. Filling the reservoir .....	30
7.5. Inadvertent filling with incorrect lubricant.....	31
7.6. Inspections prior to initial commissioning .....	31
7.7. Activation of the pump .....	32
<b>8. Standard operation.....</b>	<b>33</b>
8.1. Daily start-up .....	33
8.2. Inspections .....	33
8.3. Filling the reservoir during operation .....	33
8.4. Cleaning .....	33
<b>9. Maintenance.....</b>	<b>34</b>
9.1. Pump maintenance.....	34
<b>10. Troubleshooting .....</b>	<b>35</b>
<b>11. Spare parts.....</b>	<b>36</b>
11.1. Pump P 212 .....	36
11.2. Pump element KR 12.....	38
11.3. Pump element KR 7.....	38




## 1. Guidelines

As you read these instructions, you will notice a number of depictions and symbols which are to facilitate the navigation and understanding of these instructions. For reasons of better legibility, in these instructions we mainly use the male form for general references. Of course, the female form is also always intended. In the following the different meanings are explained.

Text representations	Meaning
<b>Bold print</b>	Highlighting of particularly important words / passages
• List 1	Marks lists
○ List 2	Marks lists
(parenthesis)	Item numbers
➤ Instructions	Instructions to personnel. These always appear in chronological order.

### 1.1 Warnings

Activities which generate actual hazards (to life and limb or possible damage of the machine) are marked by warnings. Definitely observe the instructions given in the warnings. The following warnings are possible.

Warning stage	Effect	Probability
 <b>DANGER</b>	Death, severe injury	Imminent
 <b>WARNING</b>	Serious injury	Possible
 <b>CAUTION</b>	Minor injury	Possible
<b>ATTENTION</b>	Damage to property	Possible

### 1.2 Illustrations

The used refer to a specific product. In the case of other products or product variants they may have a schematic character only. The basic functions, however, do not change.

### 1.3 Copyright

© SKF. All rights reserved.

### 1.4 Abbreviations

The following abbreviations may be used within these instructions.

max.	maximum	Nm	Newton metre
min.	minimum	incl.	including
min.	minutes	i.e.	this means
s.	seconds	approx.	approximately
e.g.	for example	Ø	diameter
ml	millilitres	®	registered
ccm	cubic cm		trademark
mm	millimetres	©	copyright
°C	degree Celsius	TM	trademark
°F	degree Fahrenheit	%	per cent
K	Kelvin	dB (A)	sound pressure level
inch	inch	>	greater than
etc.	et cetera	<	less than
kg	kilogramme	±	plus minus
l	litre	AF	across flat
mbar	millibar	ESD	electrostatic discharge
no.	number	N/A	not applicable

### 1.5 Manufacturer and Service addresses

Manufacturer	Customer Service
SKF Lubrication Systems Germany GmbH  Heinrich-Hertz-Str. 2-8 D - 69190 Walldorf	SKF Lubrication Systems Germany GmbH Central Customer Service Dept. P.O. Box 1263 D - 69183 Walldorf

### 1.6 Warranty

The instructions make no statement regarding warranty. To learn more about our warranty, see our General Terms and Conditions.

### 1.7 Disclaimer

Observation of these instructions is the prerequisite for safe operation and the achievement of product characteristics and performance levels. The manufacturer shall bear no liability for damages - of any kind - resulting from the non-observance of these instructions.

## 2. Safety information

Safety information is to be read and observed by any persons entrusted with works on the pump or by those persons who supervise or instruct the before-mentioned group of persons. It is prohibited to commission or operate the pump prior to reading the Instructions. These Instructions must be kept at an accessible location for further use.

### 2.1. Emergency stopping of pump

In case of an emergency, the pump can be shut down by:

- Switching off the machine or vehicle in which the pump is integrated.

### 2.2. Intended use

Supply of lubricants within a centralized lubrication system following the specifications made in these instructions.

### 2.3. Pump operation

Operation is permitted only, if in compliance with:

- All indications given in these instructions or stated in the applicable documents.
- Laws and regulations to be complied with by the user.

### 2.4. Foreseeable misuse

Any other use and purpose of the machine than the ones described before are strictly prohibited. The use is expressly forbidden:

- In any explosion protection zone.
- Outside the indicated operating temperature range.
- For the supply / transport / stockpiling of hazard group I fluids following Directive 67/548/EC.
- For the supply / transport / stockpiling of gases, liquefied gases, dissolved gases, vapours and fluids that reach a steam pressure of more than 0.5 bar above the normal atmospheric pressure (1013 mbar) at the maximum admissible operating temperature.

### 2.5. Prohibition of certain activities

The following activities may be carried out by manufacturer specialists or authorized persons only due to potential sources of faults that may not be visible for the user:

- Replacement or changes to the pistons of the pump elements.



### 2.6. Conversions/ modifications


Unauthorized conversions or modifications may result in unforeseeable impacts on safety. Therefore, any unauthorized reconstructions or changes are expressly prohibited.

### 2.7. Inspections

The following inspections were carried out prior to delivery:

- Electrical inspections following EN 60204-1.
- Safety and functional tests.

### 2.8. Warning label on the pump

	<b>Warning against hand injuries</b> During operation of the pump, never remove the lid and reach into the reservoir. Risk of trapping or shearing off hands and fingers!
---	--

### 2.9. Other applicable documents

In addition to these instructions, the following documents must be observed by the respective target group:

- Operating instructions / release provisions by the operator.
- Instructions of the components for set-up of the centralized lubrication system.
- Safety data sheet of the lubricant used.

Where appropriate:

- Project planning documents.
- Other relevant documents for the integration of the pump into the machine.

The owner must supplement these documents by the respective valid national or regional regulations laid down by the country in which the product is to be used. If the machine is sold or transferred, any associated documents must be passed on to the subsequent operator as well.

### 2.10. Sources of hazard

The pump has been designed, built and tested using state-of-the-art technology. It will have left our company only after having passed stringent safety and reliability tests. Like for all complex machines, also for this pump there may still be involved potential sources of hazard, for example:

### 2.11. Moving, rotating parts

- Drive, stirring paddles

### 2.12. *Energies*

- Electricity
- Temperature (hot/cold surfaces)
- Position energy (raised components)
- Parts subject to (operating) pressure
- Parts subject to spring tension

### 2.13. *Lubricants*

- Greases
- Oils

### 2.14. *Existing residual risks*

Residual risk	Remedy
<b>Transport life cycle</b>	
Tilting / falling of parts during transport, e.g. over inclines.	Secure parts against tilting / falling during transport (e.g. using tapes, belts, ropes etc.).
<b>Installation life cycle</b>	
Dropping of lifted parts/ tools.	No people may remain under suspended loads. Keep unauthorized people away. Secure suspended loads using suitable hoisting equipment (e.g. tapes, belts, ropes etc.).
Falling of parts through insufficient fixing to the machine.	Fix parts only to machine parts with a sufficient load capacity. Observe the weight. Observe the stated tightening torques. If no tightening torques are stated, the tightening torques are to be applied according to the screw size for 8.8 screws.
Electric shock when connecting the pump.	Prior to connection of the pump, de-energize all affected electrical components. If necessary, please observe discharge times. The electrical connection may be carried out by commissioned and qualified electricians only and in accordance with the connection diagram.

# Installation Instructions

## P 212 Pump

Residual risk	Remedy
<b>Installation life cycle</b>	
People falling due to contamination of floors with spilled lubricant.	Take care when filling. Bind / remove spilled lubricant immediately with a suitable agent. Observe the legal / company regulations on dealing with oils / greases and contaminated parts.
Ripping out / damage to lines when assembling movable machine parts (e.g. pivot arm).	If possible, do not mount onto movable parts. Should this not be possible, use flexible hose lines of sufficient length.
Deviating installation position: <ul style="list-style-type: none"> <li>- Foreign objects falling into the motor air intake.</li> <li>- Borehole for drainage of condensation water is no longer at the lowest point of the motor.</li> </ul>	<p>Installation of a suitable protective roof over the air intake.</p> <p>Deviating installation position only if the formation of condensation water has been completed.</p>
<b>Commissioning / operation / maintenance life cycle</b>	
Lubricant spraying out due to incorrect screw connection of components / connection of lines.	Tighten all parts with appropriate tightening torques. Use suitable hydraulic screw connections and lines for the stated pressures. Check these prior to commissioning for correct connection and damage.
Contact with the stirring paddles when filling from the top during operation of the pump.	Fill preferably via the filling connection. Fill only from the top when the pump is not moving. When filling, do not reach into the reservoir.
<b>Residual risk</b>	<b>Remedy</b>
<b>Commissioning / operation / maintenance life cycle</b>	
Electric shock through reduced insulation resistance.	Check the formation of condensation water in the motor regularly. If applicable, drain off condensation water at the drain plug. Check the insulation resistance regularly.
Electric shock when connecting the pump.	Prior to connection of the pump, de-energize all affected electrical components. If necessary, please observe discharge times. The electrical connection may only be carried out by commissioned and qualified electricians in accordance with the connection diagram.
<b>Fault life cycle</b>	
Severe heat-up / defect on motor through blockage.	Switch off the pump. Allow the parts to cool down and remove the cause of the fault.
<b>Disposal life cycle</b>	
Environmental contamination with lubricants and moistened parts.	Dispose of the parts in accordance with the valid legal / company regulations.

### **2.15. *Persons authorized to operate the pump***

#### **Operator**

A person who is qualified by training and experience to carry out the functions and activities related to normal operation, including the avoidance of possible hazards that may arise during machine operation.

#### **Person qualified for maintenance and repair works**

A professionally trained and experienced person that is capable of recognizing risks and possible hazards when carrying out installation, maintenance, or repair works on the pump, and eliminating these by initiating adequate measures.

### **2.16. *Protection of special groups of persons***

The respective legal employment restrictions do apply.

### **2.17. *Safety recommendations to be complied with***

### **2.18. *General behaviour when handling the machine***

- Only operate the pump if it is in perfect technical condition, according to its intended use, in awareness of safety and risks and in adherence to these Instructions.
- Familiarize yourself with the functions and working methods required. Always keep to the order of the indicated assembly and operating steps.
- If there are uncertainties regarding the proper condition or the correct assembly or operation, ensure clarification. The pump must not be put into service until all uncertainties will have been clarified.
- Keep unauthorized people away from the pump.
- All relevant safety provisions and in-house operational instructions applicable to the respective activity must be adhered to.
- Responsibilities for different activities must be clearly defined and adhered to. Ambiguities greatly endanger safety.
- During operation, safety-related protective and emergency devices must not be removed, modified or affected otherwise in their function and are to be checked at regular intervals for completeness and function-
- Occurring faults are to be remedied in the frame of the responsibilities. Inform your superior in the case of faults beyond your competence.
- Do not open the reservoir lid during operation. Do not reach into the reservoir.
- Wear personal protective equipment always.
- When handling lubricants etc., adhere to the respective safety data sheets.
- Never use parts of the centralized lubrication system or of the machine as standing or climbing aids.

### **2.19. Transport, installation, maintenance, repairs, servicing**

- All relevant people, (e.g. operating personnel, superiors) are to be informed prior to starting the work about its execution. Observe the company precautionary measures / working instructions.
- If protective and safety equipment has to be dismantled, it must be reassembled immediately after finishing the work, and then checked for correct function.
- Ensure through suitable measures that movable / loosened parts are blocked during the work and that no limbs can be trapped through inadvertent movements.
- Only carry out transport using suitable hoisting equipment.
- If the motor is transported separately (e.g. repairs), this should be lifted by the transport lugs / eyebolts. Check that the transport lugs / eyebolts are fixed tightly prior to lifting. Do not lift any other loads on the transport lugs / eyebolts. Motors may not be transported on the ventilator cover.
- All the parts to be mounted onto the shaft end of the motor are to be dynamically balanced according to the balancing system. With a direct coupling, please ensure that the parts align precisely (observe the manufacturer's guidelines).
- Assemble the pump only outside the working area of moving parts with sufficiently large distance to sources of heat or cold.
- Dry wet, slippery surfaces.
- Cover hot or cold surfaces accordingly.
- Prior to carrying out the work, de-energize and depressurize the pump and secure it against unauthorized switch-on. Work on electrical components must be carried out by electrical specialists only. Observe any waiting periods for discharging if necessary.
- Carry out electrical connections only according to the information in the valid wiring diagram and taking the relevant regulations and the local connection conditions into account.
- Do not touch cables or electrical components with wet or damp hands.
- Maintenance and repair work can be subject to restrictions in low or high temperatures (e.g. changed flow properties of the lubricant). Therefore try to carry out maintenance and repair work at room temperature if possible.
- Carry out all work on electrical components only using voltage insulated tools.
- Fuses must not be bypassed. Always replace fuses by such of the same type.

- Only undertake drilling at non-critical, non-supporting parts. Use any available boreholes. Do not damage lines and cables when drilling.
- Observe possible abrasion points. Protect the parts accordingly.
- Other aggregates of the machine / vehicle must not be adversely affected or damaged in function by the installation of the central lubrication system.
- All components used must be designed for:
  - maximum operating pressure
  - maximum / minimum ambient temperature
  - lubricant to be conveyed
  - operating / ambient conditions at the location of use
- Parts of the centralized lubrication system must never be subjected to torsion, shearing or bending.
- Check all parts prior to use for contamination and clean if necessary. Lubricant lines should be filled with lubricant prior to installation to make the subsequent ventilation of the system easier.
- Maintain the specified tightening torques. When tightening, use a calibrated torque wrench.
- When working with heavy parts, use suitable lifting tools.
- Avoid confusion / incorrect installation of dismantled parts. Mark these parts accordingly.

### **2.20. Initial commissioning, daily start-up**

Ensure that:

- All safety devices are completely available and functional.
- All connections are correctly connected.
- All parts are correctly installed.
- All warning labels on the machine are completely available, highly visible and undamaged.
- Unreadable or missing warning labels are replaced without delay.

### **2.21. *Cleaning***

- Risk of fire and explosion when using flammable cleaning agents. Only use non-flammable cleaning agents suitable for the purpose.
- Do not use aggressive cleaning agents.
- Do not use steam jet or high pressure cleaners. Electrical components may be damaged. Observe the IP protection class.
- Cleaning work on energized components may be carried out by specialists only.
- Do not touch cables or electrical components with wet or damp hands.
- Mark damp areas accordingly.

### **2.22. *Operator's obligations***

### **2.23. *Determination of hazards***

The operator must determine all hazards resulting from the integration of the pump into the superordinate machine and the hazards at the location of operation of the pump, and carry out the measures necessary to ensure safety and health protection.

### **2.24. *Provision of necessary information***

The operator must make the instructions required for the respective activity accessible to all people commissioned with operation, maintenance and repairs. He must ensure that these people have read the necessary instructions and have understood them.

The same applies for all relevant safety data sheets, company instructions, accident prevention regulations, instructions for purchased parts and lubricant suppliers. Depending on the business organization, the relevant instructions may have to be made accessible to other people or departments.

### **2.25. *Inspection for correct use***

The operator must check at regular intervals through suitable measures that the pump is being used according to its intended purpose, that no conversions or manipulations have been made to the machine and that all parts are fully functional..

### **2.26. Briefing of external technicians**

Prior to commencing the activities, external technicians must be informed by the operator of the company safety provisions, the applicable accident prevention regulations to be maintained, and the functions of the pump and its protective devices.

### **2.27. Provision of personal protective equipment**

The operator must provide suitable personal protective equipment for the respective location of operation and the purpose of operation.

### **2.28. Training courses**

In order to provide a maximum of safety and economic viability, SKF carries out detailed training courses.

It is recommended that the training courses are attended. Please contact SKF Customer Services for information.


### **2.29. Inspection of the delivery**

The delivery must be inspected for completeness based on the delivery papers.

Transport damages must be reported to the forwarder immediately. The packaging material should be stored until any inconsistencies have been clarified.

### **2.30. Returns**

All parts must be cleaned and correctly packed prior to being returned. Returned goods are to be marked as follows on the packaging:

	Do not place under pressure / This side up
	Protect against moisture
	Handle with care! Fragile, do not throw!

### **2.31. Disposal**

At the end of its service lifetime, the pump must be dismantled correctly and disposed of according to the respective valid provisions.

It is forbidden to use parts of a pump which is to be disposed of or to assemble these parts to make a new pump..



### 3. Lubricant

Lubricants are used specifically for certain application purposes. In order to fulfil their tasks, lubricants must fulfil various requirements to varying extents:

The most important requirements for lubricants are:

- Reduction of abrasion and wear
- Corrosion protection
- Noise minimisation
- Protection against contamination / penetration of foreign objects
- Cooling (primarily with oils)
- Longevity (physical / chemical stability)
- Compatibility with as large a number of materials as possible.
- Economic and ecological aspects

#### 3.1. Selection of lubricants

A suitable lubricant is selected already during design of the machine and forms the basis for the planning of the centralized lubrication system.

The selection is made by the manufacturer / operator of the machine, preferably together with the lubricant supplier based on the requirement profile defined through the specific application purpose. Should you have little or no experience with the selection of lubricants for centralized lubrication systems, please contact SKF. You will avoid possible costly downtimes through damage to your machine respectively system or damage to the centralized lubrication system.

#### 3.2. Specification

Lubricants of the following consistency can in principle be conveyed using SKF centralized lubrication systems.

- Lubrication greases up to NLGI 2
- Solids content up to max. 5 %
- Mineral oils with a viscosity of min. 40mm<sup>2</sup>/s at + 40 °C

Lubricants must be compatible with the following materials:

- Steel, brass, copper, aluminium
- NBR, FPM, Polyurethane

### ATTENTION

#### **Risk of damage to the machine or system**

Do not mix lubricants. This may have unforeseeable effects on the usability and therefore on the function of the centralized lubrication system.

Due to the multitude of possible additives, it is possible that individual lubricants, which - according to the manufacturer's data sheets - fulfil the necessary specification, are not in fact suitable for use in central lubrication systems (e.g. incompatibility between synthetic lubricants and materials). In order to avoid this, always use lubricants which have been tested by SKF.

Please contact the Service Department for an overview of lubricants tested by SKF.

### **3.3. Ageing of lubricants**

After a prolonged machine downtime, the lubricant must be inspected prior to recommissioning as to whether it is still suitable for use due to chemical / physical ageing. We recommend that you undertake this inspection already after a machine downtime of 1 week. If doubts arise as to the suitability of the lubricant, please replace it prior to recommissioning and if necessary undertake initial lubrication manually.

## 4. Technical data

### 4.1. Operating temperature

min.	max.
-20 °C	+70 °C

Make sure to use a lubricant that suits the actual ambient temperature (e. g. lubricant for low-temperature applications).

### 4.2. Operating pressure

Max. 350 bar

All system parts must be designed for the maximum operating pressure. Each pump element is to be secured against higher pressures using a suitable pressure limiting valve. If more pump elements are combined, these have to be secured together against higher pressures by means of a suitable pressure limiting valve.

### 4.3. Installation position

Vertical, i.e. reservoir at top

### 4.4. Space requirement

Reservoir volume	Minimum space requirement		
	Width	Height	Depth
30 L	540 mm	880 mm	400 mm

\* When using an ultrasonic sensor, there must be added about 50 mm in height.

### 4.5. Sound pressure level

< 70 dB(A)

### 4.6. Weight

Empty weight of pump	approx. 36 kg
1 pump element	+ 0,9 kg

### 4.7. Electrical connection

The electrical connection is carried out in accordance with the general valid installation prescriptions for electrical systems.

Tolerance voltage                    ± 5 %

Tolerance frequency                ± 2 %

The waveform and mains symmetry must be maintained.

### 4.8. IP-protection class

Motor:

For IP protection class, see motor type plate respectively chapter "Technical data of the motors".

Ultrasonic sensor:

IP 65

### 4.9. Tightening torques

Component	Tightening torques	
Pump element to housing	35	Nm
Counternut spindle to pump element	12	Nm
Closure screw to housing	12	Nm


### 4.10. Connections, outlets

1 x filling connection	3/8"
12 x outlet	3/8"

### 4.11. Filling possibilities

- Via filling adapter
- Via reservoir lid

### 4.12. Rotational direction of the pump

	The rotational direction is always clockwise (CW). Observe the arrow on the reservoir. If the rotational direction deviates: switch off the pump immediately and check the electrical connection.
---	---

### 4.13. Permitted speeds

Lubricants	Minimum speed	Maximum speed
Grease	2.5 rpm <sup>-1</sup>	22 rpm <sup>-1</sup>
Oil	2.5 rpm <sup>-1</sup>	35 rpm <sup>-1</sup>


### 4.14. Flow rate

The flow rate is infinitely variable as follows:

KR 7 30 % to 100 %

KR 12 40 % to 100 %

The indications stated in the flow rate diagrams apply to Fuchs Renocal FN 745/95 NLGI 2 at + 20° C and counterpressures from 0 to 350 bar.

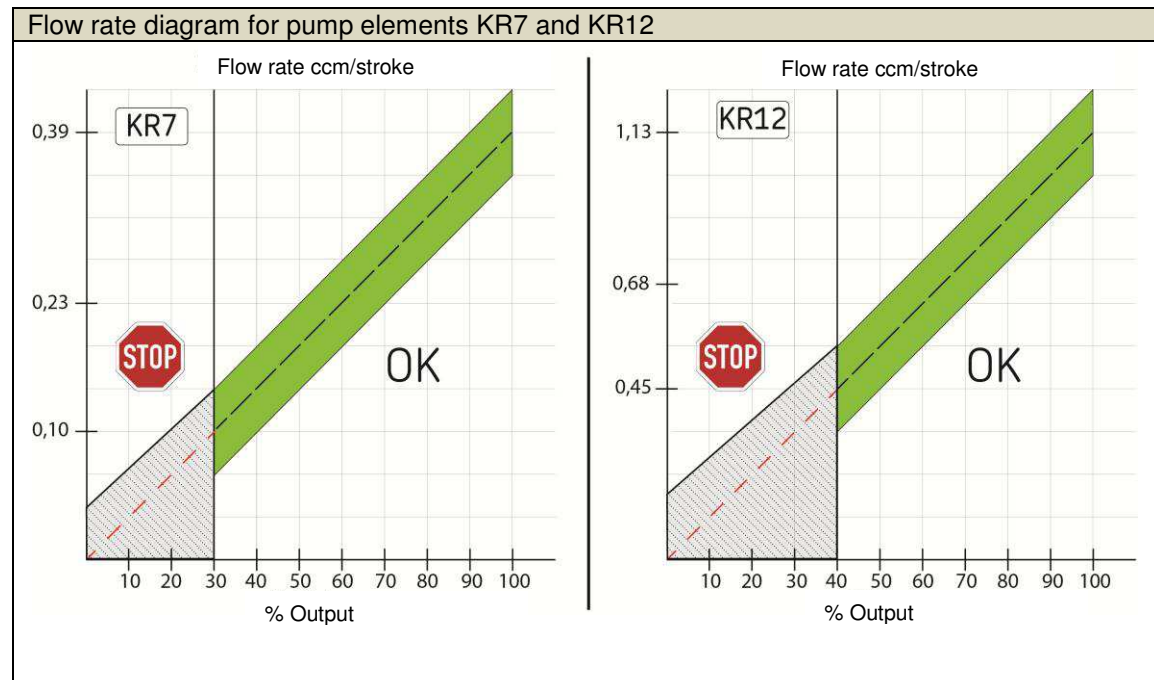

### ATTENTION


#### Risk of damage to the machine

Variable influencing sizes such as: ambient temperature, counterpressure, type of material to be dispensed, NLGI class of the material to be dispensed, type of connection of the multi-range motor of the pump may result in a deviation of the flow rate exceeding the range stated in the flow rate diagrams. This has to be considered when designing the lube points. Should you have further questions, please contact our Customer Service Dept.



## 5. Technical data of the ultrasonic sensor

### 5.1. High-level signal / low-level signal / minimum switching distance

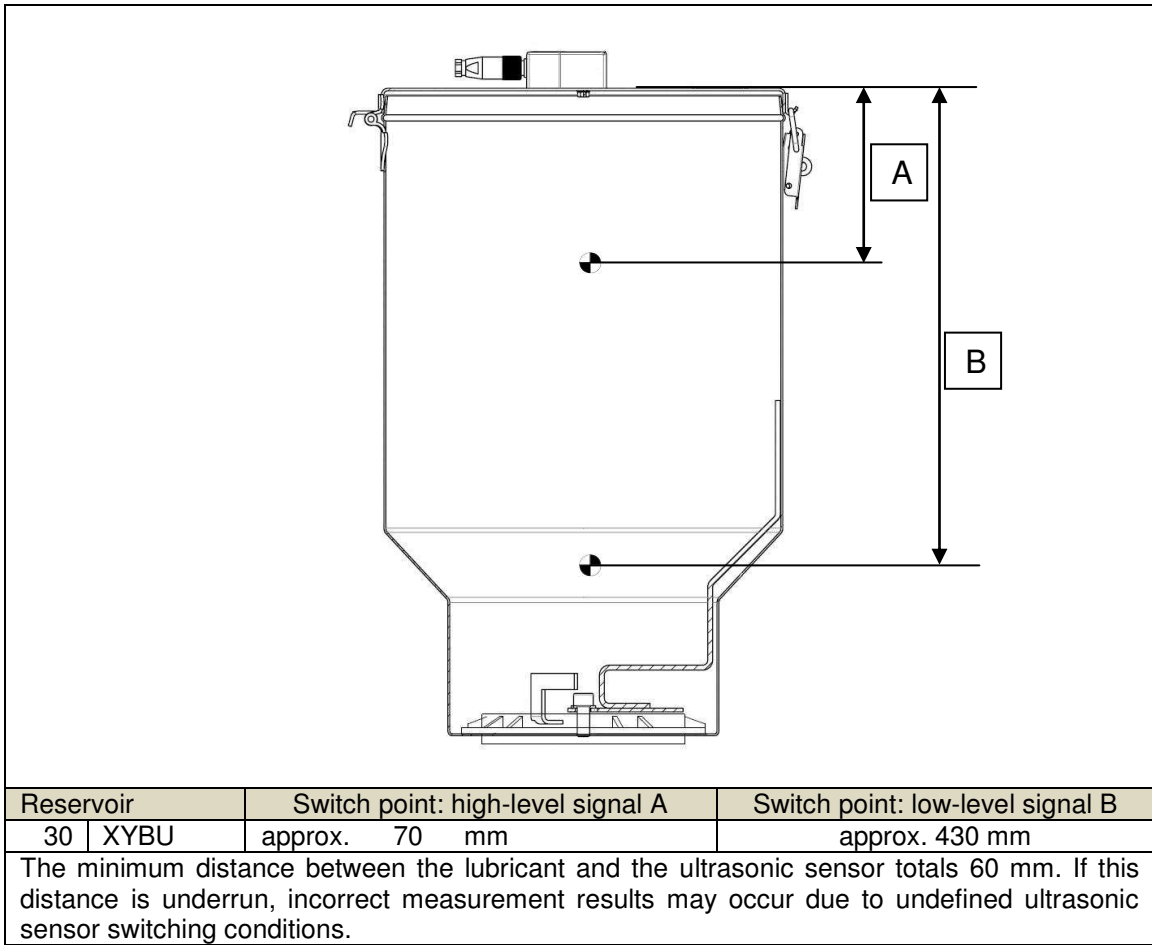

### LED displays on the ultrasonic sensor

Status	H1	H2	H3	
Filling level OK	Off	Off	On	Green
Reservoir empty	Off	On	On	Green
Reservoir full	On	Off	On	Green
Reservoir overfilled	On	Off	On	Red


# Installation Instructions

## P 212 Pump

### Electrical values

Supply		
Rated operating voltage	$U_E$	24 VDC
Operating voltage range	$U_B$	20 – 30 VDC
Permitted residual ripple		10 %
No-load current consumption		< 60 mA
Switching output		
Related operating current	$I_E$	< 200 mA
Voltage drop	$U_D$	< 3 V
Switch-on error pulse		Suppressed
High-level signal switching function		Suppressed, NO contact
Low-level signal switching function		Switching to P potential, NC contact

### Connection diagram

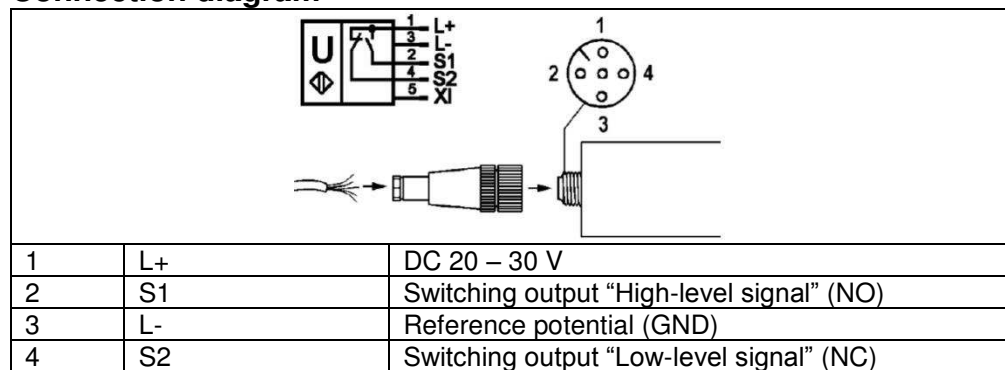



Part numbers – ultrasonic sensor		
Reservoir	30 L	664-36939-5

### Operating temperature

The operating temperature of the ultrasonic sensor is at: - 25 °C to + 70 °C




## 6. Brief description of the pump

		<b>DANGER</b>
<b>Electric shock</b> Disconnect the pump from the mains prior to all works on electrical parts,		

**Pump 212 consists of the following main components:**

- (1) Ultrasonic sensor
- (2) Reservoir with stirring paddle
- (3) Filling connection
- (4) Pump elements (1-12)
- (5) Pump housing
- (6) Gear
- (7) Motor

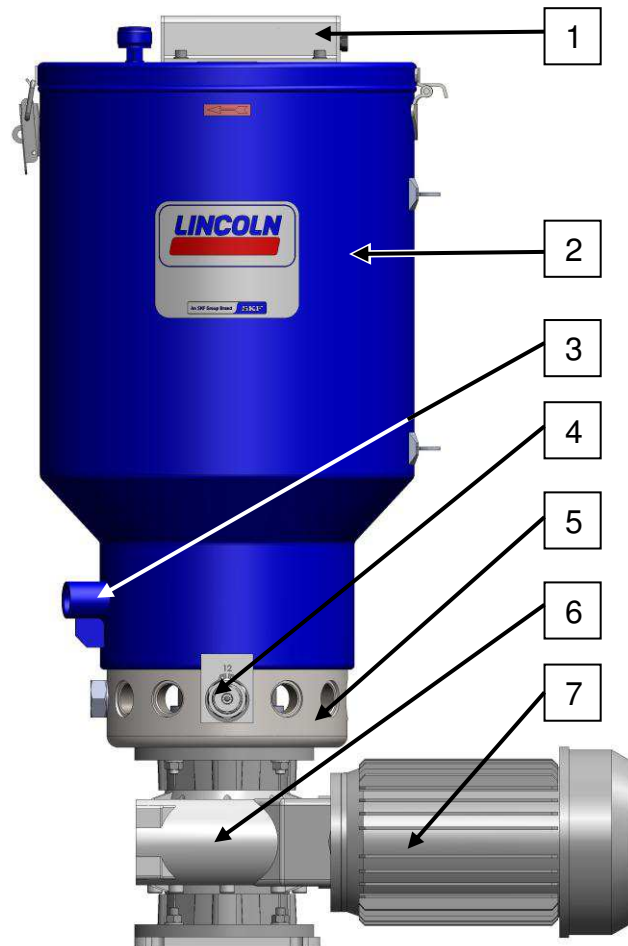

# Installation Instructions

## P 212 Pump

### Working method:

The gear (6) reduces the motor speed (7) to the necessary speed of the eccentric shaft (8).


The eccentric shaft (8) drives the pump elements (4) and the stirring paddle.

The stirring paddle homogenizes and ventilates the lubricant and pushes it in the direction of the suction boreholes of the pump elements (4).

The pump elements (4) convey the lubricant by the movement of the pistons.

It is distinguished between the suction phase (suction of lubricant out of the reservoir) and the pressure phase (supply of lubricant into the lubrication line).

An ultrasonic sensor (1) determines the reservoir filling-level (high-level or low-level signal). A filling pump is switched on and off accordingly by means of a control unit provided by the customer.

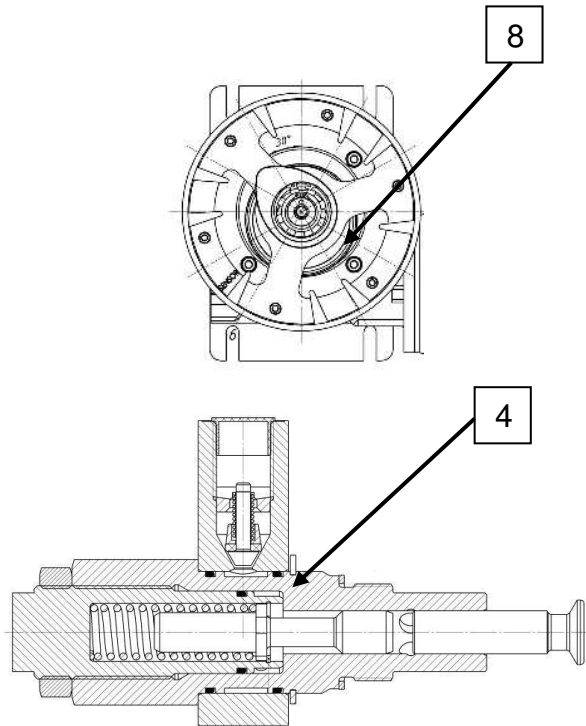


## 7. Installation and commissioning

### 7.1. Important note on the installation of the pump elements

Pump elements are factory-set to minimum flow rate in order to improve the suction behaviour (minimum space of air in the pump element).

After commissioning, the pump elements must be set to the required flow rate.


For installation of the individual pump elements, see schematic on the right.

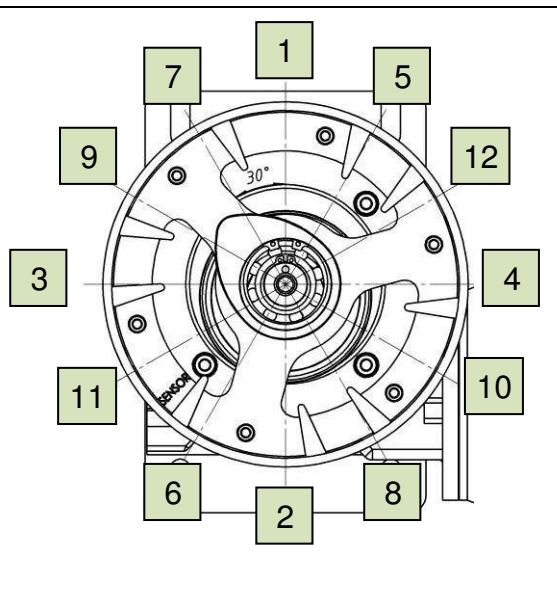

### 7.2. Assembly of the pump elements

#### ATTENTION






Damages to the pump are possible. Make sure that each pump element is seated correctly in the notch of the catch ring.

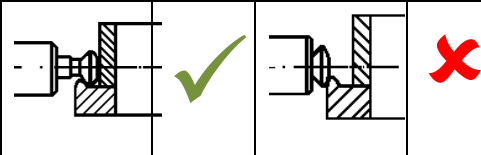

- Remove closure screw.
- In the case of the reservoir being full, use adequate tool, e.g. screw driver, to open a channel up to the catch ring.
- Pull piston about 30 mm out of the pump element.
- Insert pump elements slantwise and hang them straight into the catch ring.
- Tighten pump elements with torque wrench.

**Tightening torque = 35 Nm**

- In the case of the reservoir being empty, additionally check the position of the pump element in the notch of the catch ring from the top.
- Switch pump on.
- Verify correct functioning of the pump elements by observing the movement of the control pins.
- Wait until grease leaks from the outlet stud of the pump elements.
- Switch off pump.
- Mount the grease-primed supply lines and the pressure limiting valves..

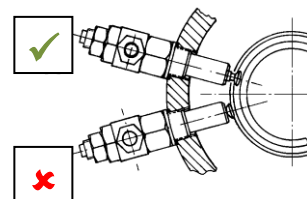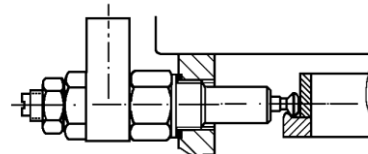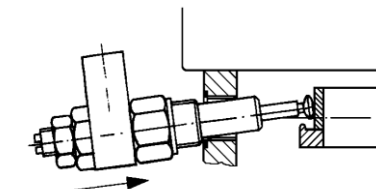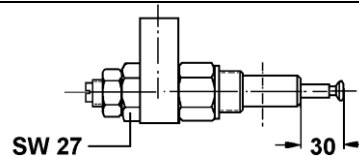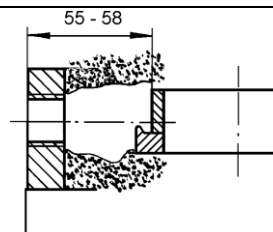

### 7.3. Adjustment of the pump elements

**NOTE:**

The output of the pump elements can be modified also during operation.

- Loosen counternut (1).
- In order to adjust the flow rate, turn the spindle (2).

⤿ = lower flow rate


⤿ = higher flow rate

The measure R states the percentage flow rate setting (values, see flow rate diagram). The flow rate is reduced respectively increased by about 10 % per millimetre.



R	%	KR7	KR12
R = 25 mm	100 %	✓	✓
R = 24 mm	090 %	✓	✓
R = 23 mm	080 %	✓	✓
R = 22 mm	070 %	✓	✓
R = 21 mm	060 %	✓	✓
R = 20 mm	050 %	✓	✓
R = 19 mm	040 %	✓	✓
R = 18 mm	030 %	✓	✗

- After adjusting the flow rate, retighten the counternut (1).

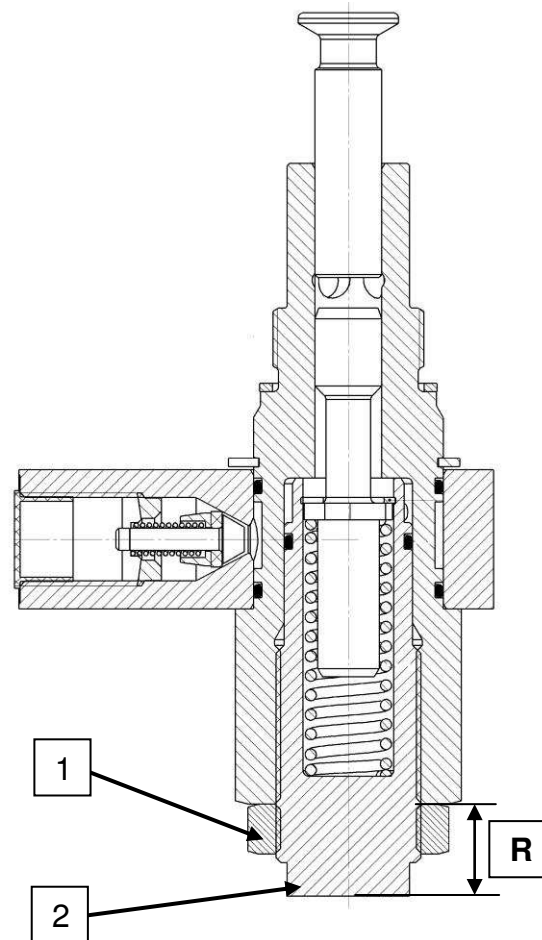Tightening torque = 12 Nm



### 7.4. Filling the reservoir

	<p> <b>WARNING</b></p> <p><b>Risk of hand injuries caused by the stirring paddle</b> Fill lubricant via the lid only when the pump is not moving. Never reach into the reservoir while the pump is running.</p>
---	--

### ATTENTION

#### Risk of central lubrication system faults

- When filling, ensure that no contamination enters the reservoir.
- The ultrasonic sensor must not come into contact with the lubricant.
- The distance between the lubricant and the ultrasonic sensor should total at least 60 mm.

- Switch off the pump and secure it against being switched on again.
- Open the reservoir lid (1).
- Fill lubricant into the reservoir.
- Close the reservoir cover.
- Switch on the pump.



### **7.5. Inadvertent filling with incorrect lubricant**

Should incorrect lubricant have been filled, please proceed as follows.

- Switch off the pump and secure it against being switched on.
- Remove lubricant.
- Clean the reservoir, pump housing and, if applicable, the tubing system.
- Fill in lubricant of correct specification.
- Switch on pump.
- Inform your superior to ensure that the error does not occur again.

### **7.6. Inspections prior to initial commissioning**

#### **ATTENTION**

##### **Risk of damage to the machine**

Fill the feed lines with lubricant and lubricate the lubrication points manually. Otherwise the bearing points may become damaged due to a lack of lubricant.

Check the entire system for accordance with the intended purpose and the planning documentation.

Ensure that all parameters and lubricants have been correctly adjusted or are present.

If deviations are detected, they must be remedied without delay.

In order to warrant safety and function, a person assigned by the operator must inspect certain areas of the central lubrication system prior to initial commissioning. Detected defects must be reported without delay to a superior and remedied. The repair of defects must be carried out by a specialist only.

The following points must be inspected prior to initial commissioning:

### Electrics:

- Electrical connections carried out correctly.
- Cable entries sealed correctly.
- The voltage and frequency of the power network correspond to the information on the type identification plate of the motor.
- Monitoring devices and additional equipment (e.g. motor circuit breaker) are correctly connected and adjusted.
- All parts such as lines, cables, metering devices, etc. have been correctly installed and are undamaged.

### Mechanics:

- No loose or missing parts remaining (e.g. pressure relief valves, supply lines)
- No damages, deformations or cracks.
- No smoke or smouldering spots.
- No discolorations, contaminations and/or corrosion.
- No unusual humidity accumulations, odours, vibrations, or sounds.
- No leakage of lubricant at connections and from lines.

### **7.7. Activation of the pump**

The pump is activated on:

- Installation into a machine
  - By switching on the machine contact.
- Installation into a vehicle
  - Activation of the driving switch or start of the driving movement.



## 8. Standard operation

### 8.1. Daily start-up

Below find the activities to be carried out in case of standard operation.

### 8.2. Inspections








With regard to "Inspections prior to initial commissioning" the operator has to define suitable inspection intervals depending on the actual operating conditions.

### 8.3. Filling the reservoir during operation

Fill the reservoir as described in chapter "Installation and commissioning".

### 8.4. Cleaning

For cleaning, required protective clothes, cleaning agents and devices, observe valid operation guidelines provided by the operator.

 	 <b>DANGER</b>
	<b>Danger to life</b> Risk of fire and explosion when using inflammable cleaning agents. Do not use steam or high-pressure cleaners. Electrical components may be damaged. Do not touch cables or electrical components with wet or damp hands. Cleaning work on energized components may be carried out by electrical specialists only. Wear personal protective equipment.
	   

#### Exterior cleaning

- Thorough cleaning of all surfaces.
- Mark and secure wet areas.

#### Interior cleaning



- Normally, interior cleaning is not required.

### ATTENTION

#### Possible damage to the machine

When using solvents for cleaning purposes, ensure their compatibility with plastic parts and lacquers. Do not use polar organic solvents like e.g. alcohol, methanol or acetone.

## 9. Maintenance

		<b>DANGER</b>
	<b>Electric shock</b> Disconnect the pump from the mains electrically prior to all work on electrical parts.	

### 9.1. Pump maintenance

The pump is mainly maintenance-free.

However, the following parts should be inspected and, if necessary, replaced by new parts at regular intervals:

- Pressure relief valves
- Check valves
- Pump elements.

Pressure relief valve tolerance + 5 % / - 10 %


Should this tolerance be exceeded, the pressure relief valves must be replaced.

### 10. Troubleshooting

<b>Pump motor does not run</b>		
Possible cause	Observation	Remedy
Fault with superior machine / with external PLC controller / motor circuit breaker released	Stirring paddle does not rotate; no pump sound; control pins do not move	Check power lines See fault analysis of machine Determine cause Reactivate motor circuit breaker
Mechanical fault	Stirring paddle does not rotate; control pins do not move	Verify that the piston is seated correctly in the eccentric after replacement of a pump element
Electrical fault	After exclusion of the previously mentioned causes	Have the pump checked by an electrically qualified person
<b>Motor runs, but pump does not run</b>		
Possible cause	Observation	Remedy
Reservoir empty.	Visual check	Refill pump or refill reservoir of filling pump
Air in the lubricant.	Bubbles in the lubricant.	Vent the pump
Suction borehole of pump element blocked.	After disassembling the pump element	Disassemble and clean pump element
Check valve defective or contaminated.	After disassembling the check valve	Replace check valve
Pump element worn	Low pressurization	Replace pump element
Defective pressure relief valve / fault at the lubrication point.	Grease leaking from the pressure relief valve	Determine cause Replace pressure relief valve
Blockage in the downstream lubrication system.	Grease leaking from the pressure-relief valve	Determine and remedy cause
If the fault cannot be found or corrected in this way, please get in touch with our Customer Service Department	Visual check	Refill pump or refill reservoir of filling pump
If the fault cannot be found or corrected in this way, please get in touch with our Customer Service Department		

## 11. Spare parts

### 11.1. Pump P 212

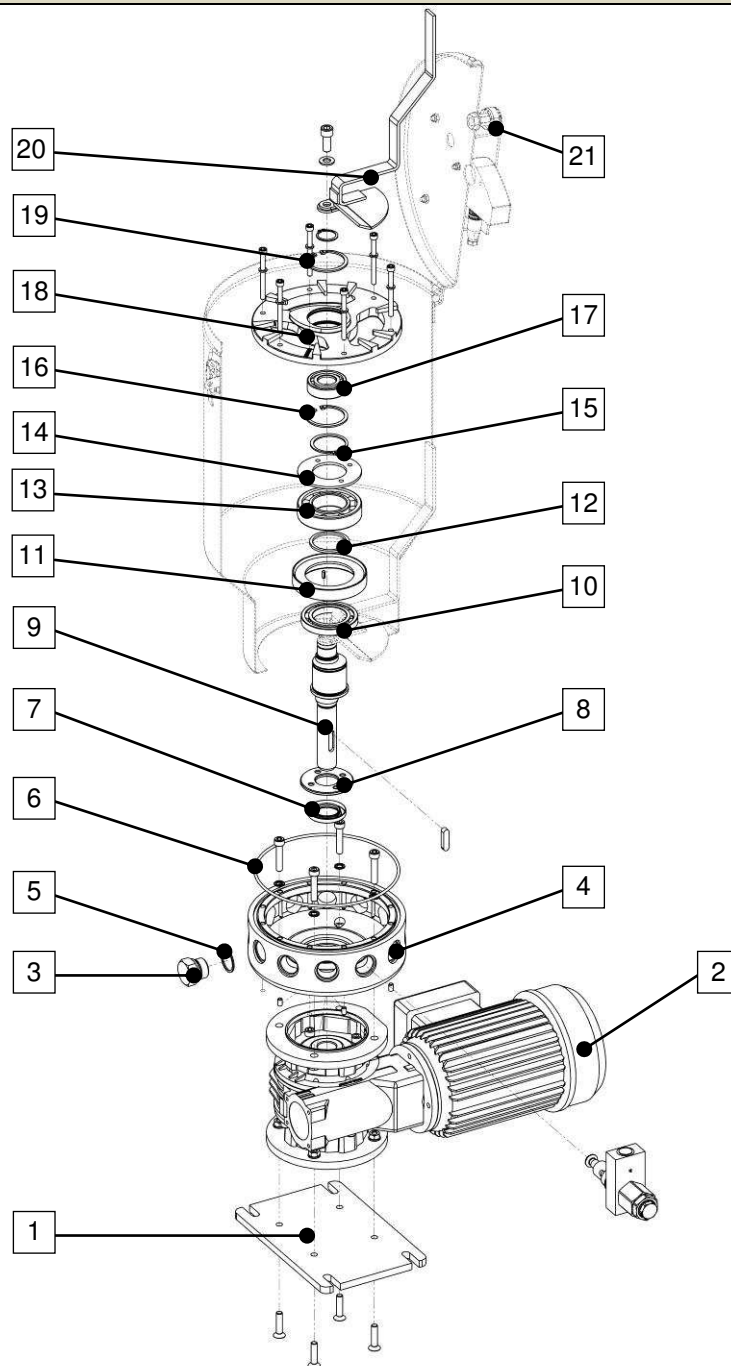


# Installation Instructions

## P 212 Pump


Item	Name	Qty.	Part no.
1	Fastening plate	1	460-73065-1
2	Motor 0,55kW with gear 67:1	1	245-13996-1
3	Closure screw	1-12	303-17431-1
4	Housing P212	1	460-73066-1
5	Sealing ring for closure screw	1-12	306-17814-1
6	O-ring 186 x 3,5	1	219-12226-8
7	Radial sealing ring 30x50x7	1	220-12231-4
8	Slide washer	1	460-73062-1
9	Eccentric shaft	1	460-73063-1
10	Grooved ball bearing D45/75x10	1	250-14064-3
11	Catch ring	1	460-73061-1
12	Distance ring	1	460-73067-1
13	Cylinder roller bearing D85/45x19	1	250-14005-3
14	Prop washer for bearing	1	460-73064-1
15	Retaining ring DIN471 45x1,75	1	211-12164-9
16	Retaining ring DIN472 52x2	2	211-12448-5
17	Cylinder roller bearing D52/25x15	1	250-14005-4
18	Intermediate bottom	1	460-73236-1
19	Retaining ring DIN471 25x1,2	1	211-12164-6
20	Stirring paddle	1	560-32129-1
21	Air filter	1	253-14050-1

### 11.2. Pump element KR 12

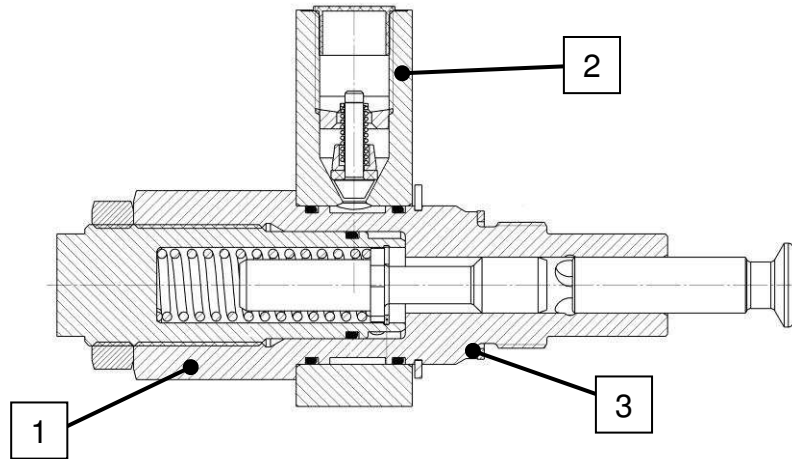

Item	Name	Qty.	Part no.
1	Pump element KR 12 assy., including outlet stud with check valve assy. and sealing ring	1	660-77619-1
2	Outlet stud with check valve assy.	1	560-33838-1
3	Sealing ring	1	306-17814-1

### 11.3. Pump element KR 7

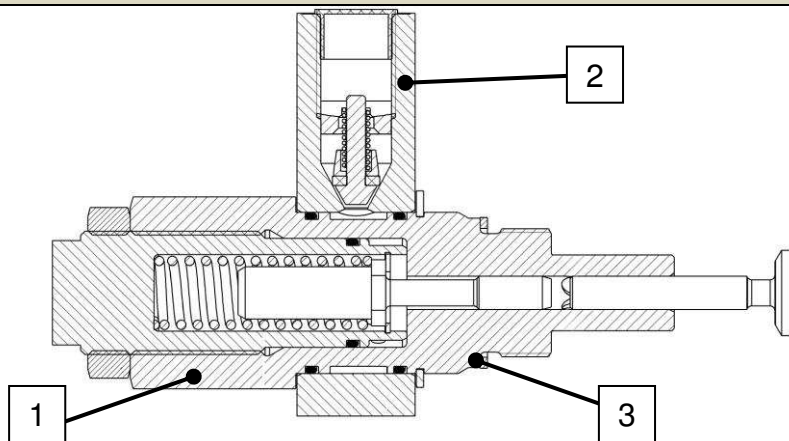


Item	Name	Qty.	Part no.
1	Pump element KR 7 assy., including outlet stud with check valve assy. and sealing ring	1	660-77835-1
2	Outlet stud with check valve assy.	1	560-33838-1
3	Sealing ring	1	306-17814-1



# Installation Instructions

## P 212 Pump

---

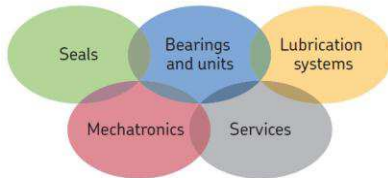

### The Power of Knowledge Engineering

Drawing on five areas of competence and application-specific expertise amassed over more than 100 years, SKF brings innovative solutions to OEMs and production facilities in every major industry worldwide. These five competence areas include bearings and units, seals, lubrication systems, mechatronics (combining mechanics and electronics into intelligent systems), and a wide range of services, from 3-D computer modelling to advanced condition monitoring and reliability and asset management systems. A global presence provides SKF customers uniform quality standards and worldwide product availability.

### Important information on product usage

All products from SKF may be used only for their intended purpose as described in this brochure and in any instructions. If operating instructions are supplied with the products, they must be read and followed.

Not all lubricants are suitable for use in centralized lubrication systems. SKF does offer an inspection service to test customer supplied lubricant to determine if it can be used in a centralized system. SKF lubrication systems or their components are not approved for use with gases, liquefied gases, pressurized gases in solution and fluids with a vapor pressure exceeding normal atmospheric pressure (1 013 mbar) by more than 0,5 bar at their maximum permissible temperature.

Hazardous materials of any kind, especially the materials classified as hazardous by European Community Directive EC 67/548/EEC, Article 2, Par. 2, may only be used to fill SKF centralized lubrication systems and components and delivered and/or distributed with the same after consulting with and receiving written approval from SKF.